

VAPORIZED HYDROGEN PEROXIDE (VHP[®]) DECONTAMINATION OF VX, GD, AND HD*

George W. Wagner,[†] David C. Sorrick,[†] Lawrence R. Procell,[†] Zoe A. Hess,[†] Mark D. Brickhouse,[†]
Iain F. McVey[‡] and Lewis I. Schwartz[‡]

[†]U.S. Army Edgewood Chemical Biological Center, Aberdeen Proving Ground, MD 21010 and

[‡]Strategic Technology Enterprises, Inc., 5960 Heisley Rd., Mentor, OH 44060

Vaporized Hydrogen Peroxide (VHP[®]) has been utilized for more than a decade to sterilize clean rooms and pharmaceutical processing equipment and, quite recently, to decontaminate anthrax-ridden buildings. VHP[®] is also suitable for the decontamination of VX and HD, which readily converts these agents to ethyl methylphosphonic acid and bis(2-chloroethyl) sulfoxide, respectively. However, GD is quite stable in the presence of VHP[®]. The simple addition of low-levels of ammonia gas renders VHP[®] reactive towards GD, converting it pinacolyl methylphosphonic acid. Thus, with suitable activation via ammonia gas, VHP[®] affords the broad-spectrum decontamination of VX, GD, and HD. Potential decontamination applications for this gaseous reactant system include: buildings, vehicle and aircraft interiors, and sensitive equipment.

INTRODUCTION

Reactive gases suitable for the decontamination of building and vehicle interiors have been sought for many years. Initially this capability was desired for military purposes; but lately it has perhaps become an even more pressing issue for homeland defense. The anthrax attacks perpetrated in the Fall of 2001 showed just how vulnerable the U.S. is to terrorist attacks involving Weapons of Mass Destruction (WMD) and, further, how difficult it is to thoroughly decontaminate buildings affected by WMD. Of course, terrorist attacks of this nature are not limited to bio agents. Just a scant six years prior to the anthrax attacks occurred the premiere unleashing of WMD on a general populace by a terrorist group: the infamous Sarin nerve gas attack on a Tokyo subway in 1995. As for military use of WMD against the U.S., U.S. troops have not suffered *enemy inflicted* chemical gas attacks since WWI.¹ Regardless of the relative urgency of military or homeland defense needs, it is clear that suitable decontamination systems for buildings and vehicle interiors are required, and reactive gases will be the quintessential component of these systems.

The decontamination of chemical agents with reactive gases has been fraught with problems. In part, the difficulty arises from the rich chemical diversity of these agents. For example, recent studies have shown that ozone, although a well-known, broad-spectrum sterilant for pathogens, does not enjoy similar wide-ranging effectiveness against chemical agents. Indeed, ozone has no effect on nerve agent GD;² generates a plethora of presumed toxic by-products of nerve agent VX,^{2,3} yet works quite well against blister agent HD,³ selectively oxidizing it to the non-vesicant sulfoxide.⁴

There is another, broad-spectrum gaseous sterilant that has seen increasing industrial applications: Vaporized Hydrogen Peroxide (VHP[®]). For over 10 years VHP[®] has been a standard biodecontamination technology in the pharmaceutical industry with proven efficacy against a wide variety of microorganisms,⁵ and recently, VHP[®] was successfully employed to decontaminate a Government anthrax-contaminated

*U.S. and international patents pending.


Report Documentation Page				Form Approved OMB No. 0704-0188	
Public reporting burden for the collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to a penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.					
1. REPORT DATE 19 NOV 2003		2. REPORT TYPE N/A		3. DATES COVERED -	
4. TITLE AND SUBTITLE Vaporized Hydrogen Peroxide (VHP) Decontamination Of VX, GD, And HD				5a. CONTRACT NUMBER	
				5b. GRANT NUMBER	
				5c. PROGRAM ELEMENT NUMBER	
6. AUTHOR(S)				5d. PROJECT NUMBER	
				5e. TASK NUMBER	
				5f. WORK UNIT NUMBER	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) U.S. Army Edgewood Chemical Biological Center, Aberdeen Proving Ground, MD 21010				8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)				10. SPONSOR/MONITOR'S ACRONYM(S)	
				11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release, distribution unlimited					
13. SUPPLEMENTARY NOTES See also ADM001851, Proceedings of the 2003 Joint Service Scientific Conference on Chemical & Biological Defense Research, 17-20 November 2003.					
14. ABSTRACT					
15. SUBJECT TERMS					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT UU	18. NUMBER OF PAGES 5	19a. NAME OF RESPONSIBLE PERSON
a. REPORT unclassified	b. ABSTRACT unclassified	c. THIS PAGE unclassified			

building.⁶ Effective hydrogen peroxide-based liquid decontaminants such as Decon GreenTM⁷ have been under development for nearly ten years as well. Decon GreenTM is a broad-spectrum decontaminant for anthrax, VX, GD and HD; thus proving that with proper activators, hydrogen peroxide is an effective chem/bio decontaminant. The current study examines the use of VHP[®], in conjunction with a suitable gaseous activator, for the broad-spectrum decontamination of VX, GD and HD.


RESULTS AND DISCUSSION

Early in the development of Decon GreenTM it was found that H₂O₂, mixed with a suitable organic co-solvent to permit the dissolution of water-insoluble HD, enabled the selective oxidation of HD to the non-vesicant sulfoxide (Scheme 1) with half-lives on the order of 42 minutes.⁸ (Fortunately, it was found that secondary oxidation to the vesicant sulfone is orders of magnitude slower and does not appreciably occur during the desired reaction time.) However, such mixtures of H₂O₂/solvent are not as reactive for G agents and VX: GB (Scheme 2) exhibits a slow hydrolysis with a half-life of about a month, whereas VX (Scheme 3) undergoes an initial, fast hydrolysis, consuming about 50% within an hour, before the reaction abruptly halts with no further conversion for at least 16 h.⁸ However, prior work had shown that both GB and VX react quite rapidly with basic peroxide,^{9,10} in which the powerful peroxyanion OOH⁻ is generated. Indeed, the initial reaction of VX is attributed to protonation of its amine group (pK_a about 8.6¹¹) with concomitant generation of OOH⁻. The VX *perhydrolysis* is not sustained, however, as accumulating acidic products neutralize OOH⁻. Of course, with proper buffering to maintain OOH⁻ levels, H₂O₂/solvent mixtures will react rapidly and completely with both VX and G agents.⁸ Two important benefits of perhydrolysis (OOH⁻) vs. normal, basic hydrolysis (OH⁻) are that fast reactions for G agents and VX are achievable at substantially lower pH, and that perhydrolysis of VX is selective, avoiding formation of up to 20% toxic EA-2192 (Scheme 3).¹²


Scheme 1

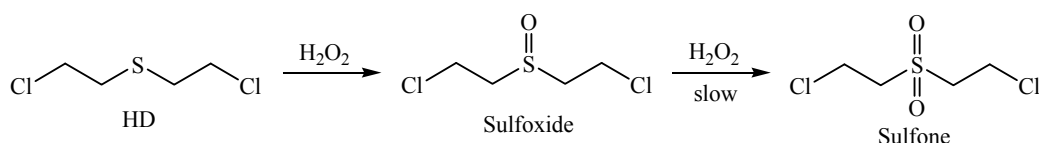

Scheme 2

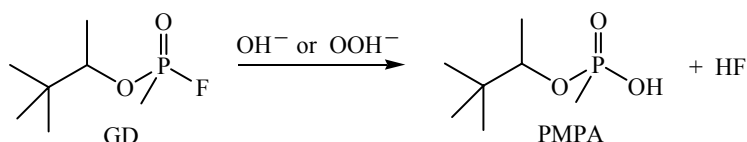

Scheme 3

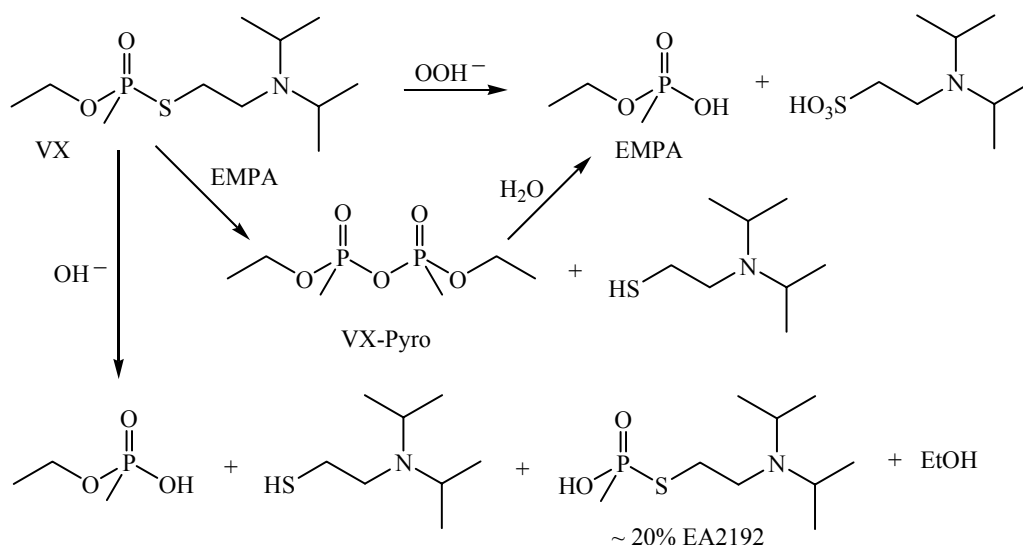

The reaction behavior of VX, GD and HD with H_2O_2 solutions is quite similar to their behavior with VHP[®].¹³ As shown in Figure 1, HD is rather quickly and steadily selectively oxidized to the non-vesicant sulfoxide (Scheme 1). No vesicant sulfone is detected during this reaction time. A mass balance is not maintained for the reaction owing to competing HD evaporation, but the reaction goes to completion within 2 hours. Addition of NH_3 gas (see below) results in a slight slowing of the oxidation reaction.

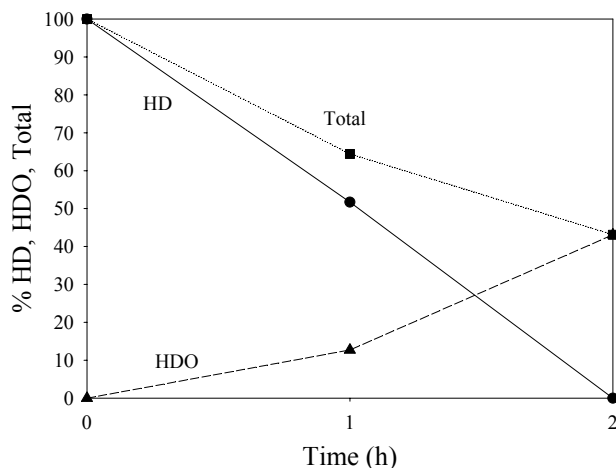


Figure 1. Reaction profile of HD with VHP[®].¹³

On the left side of Figure 2 is shown the reaction profile for VX with VHP[®] where the expected perhydrolysis to selectively form EMPA is observed (Scheme 2). No toxic EA-2192 is formed. Some toxic VX-pyro is observed via a side reaction with EMPA (Scheme 3), but this common impurity/intermediate is unstable in the presence of water and rapidly fades as the VX is exhausted. Negligible evaporation of VX, EMPA or VX-pyro is observed over the 24 h period, thus preserving the mass balance for the reaction. Surprisingly, unlike VX perhydrolysis in the absence of buffer the VX reaction with VHP[®] goes to completion. The reason for the different behavior in the gas-phase reaction is not clear. However, as shown on the right side of Figure 2 introducing a small amount of basic ammonia (NH_3) gas into the VHP[®] stream dramatically hastens the reaction of VX which goes to completion in less than 6 hours. Thus, the basicity of NH_3 is effective for enhancing the reaction of VX with VHP[®].

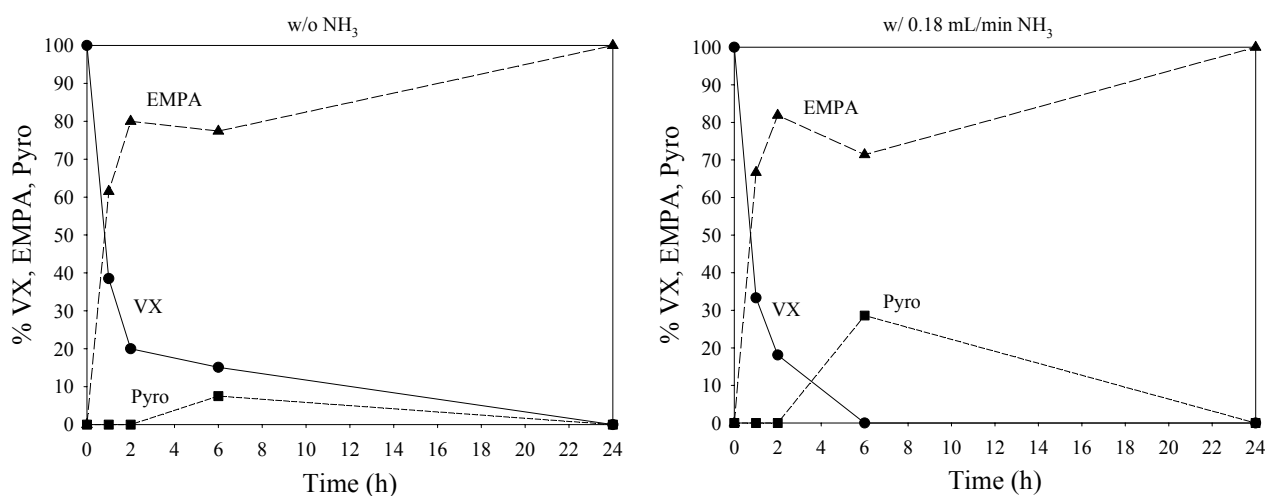


Figure 2. Reaction profiles of VX with VHP[®] without (left) and with (right) added NH_3 gas.¹³

Preliminary work with GD showed no reaction with VHP[®] alone; but NH_3 gas was found to react quickly with GD in either a VHP[®] or moist air stream.¹⁴ However, as shown in Figure 3 the reaction of GD

with basic water vapor (right side of Figure 3) is appreciably faster than that with basic VHP[®] (left side of Figure 3). Although the PMPA product (Scheme 2) was observed in preliminary work,¹⁴ it is not observed under the current conditions as the high flow rates employed¹³ caused rapid evaporation of both GD and PMPA. Although VHP[®] actually retards the rather facile reaction of GD with NH₃ gas, the combination remains an effective decontaminant for GD.

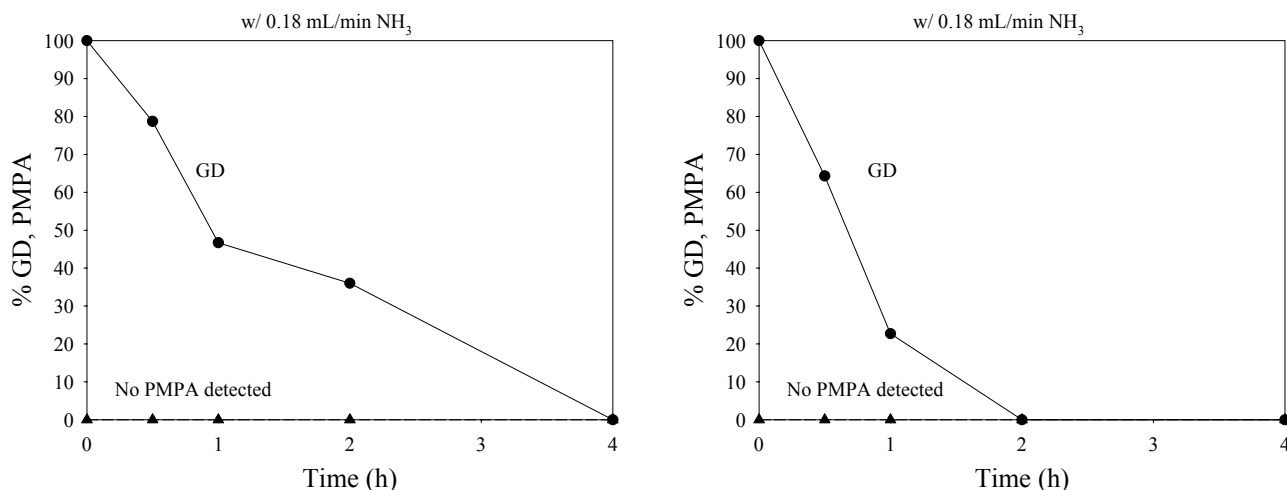


Figure 3. Reaction profiles of GD with NH₃ gas with VHP[®] (left) and water vapor (right).¹³

CONCLUSIONS

VX, GD and HD can be decontaminated using VHP[®] with the simple addition of NH₃ gas. HD is selectively oxidized to the non-vesicant sulfoxide. VX is selectively hydrolyzed to non-toxic EMPA and formation of toxic EA-2192 is avoided. GD is hydrolyzed to non-toxic PMPA. Under the current conditions, 600 ppm VHP[®] and 8 ppm NH₃ gas effect decontamination of VX, GD and HD within 6 hours.

REFERENCES

1. Croddy, E. *Chemical and Biological Warfare*; Springer-Verlag: New York, 2002.
2. Wagner, G. W.; Bartram, P. W.; Brickhouse, M. D.; Connell, T. R.; Creasy, W. R.; Henderson, V. D.; Hovanec, J. W.; Morrissey, K. M.; Stuff, J. R.; Williams, B. R. *J. Chem. Soc., Perkin Trans. 2* **2000**, 1267-1272.
3. Hovanec, J. W.; Bartram, P. W.; Henderson, V. D. In the *Proceedings of the 1997 ERDEC Scientific Conference on Chemical and Biological Defense Research, ERDEC-SP-063*; U.S. Army Edgewood Research, Development and Engineering Center, 1998, pp. 785-788.
4. Marshall, E. K., Jr.; Williams, J. W. *J. Pharmacol. Exp. Therapeutics* **1921**, 16, 259-272.
5. Steris Corp. company literature; see www.steris.com.
6. Gustin, E. J.; Janick, A. J.; McVey, I. F. *Facility Decontamination of Anthrax Spores Utilizing Vaporized Hydrogen Peroxide*, poster presented at ASM Biodefense Research Meeting, Baltimore, MD, Mar 9-12, 2003.
7. (a) Wagner, G. W.; Yang, Y.-C. *Ind. Eng. Chem. Res.* **2002**, 41, 1925-1928. (b) Wagner, G. W.; Procell, L. R.; Henderson, V. D.; Sorrick, D. C.; Yang, Y.-C. In the *Proceedings of the 2002 Joint Service Scientific Conference on Chemical & Biological Defense Research*; U.S. Army Edgewood Chemical Biological Center, in press.

8. Wagner, G. W.; Yang, Y.-C. In the *Proceedings of the 1998 ERDEC Scientific Conference on Chemical and Biological Defense Research, ERDEC-SP-004*; U.S. Army Edgewood Research, Development and Engineering Center, 1999, pp. 285-291.
9. (a) Epstein, J.; Demek, M. M.; Rosenblatt, D. H. *J. Org. Chem.* **1956**, *21*, 796-797. (b) Larsson, L. *Acta Chem. Scand.*, **1958**, *12*, 723-730.
10. (a) Yang, Y.-C.; Szafraniec, L. L.; Beaudry, W. T.; Bunton, C. A. *J. Org. Chem.* **1993**, *58*, 6964-6965. (b) Yang, Y.-C.; Berg, F. J.; Szafraniec, L. L.; Beaudry, W. T.; Bunton, C. A.; Kumar, A. *J. Chem. Soc., Perkin Trans. 2* **1997**, 607-613.
11. Yang, Y.-C.; Szafraniec, L. L.; Beaudry, W. T.; Rohrbaugh, D. K.; Procell, L. R.; Samuel, J. B. *J. Org. Chem.* **1996**, *61*, 8407-8413.
12. Yang, Y.-C.; Szafraniec, L. L.; Beaudry, W. T.; Rohrbaugh, D. K. *J. Am. Chem. Soc.* **1990**, *112*, 6621-6627.
13. VHP[®] reactions were carried out by depositing 5 μ L VX, GD or HD onto 1 cm diameter glass wool filter discs; suspending the discs contained in aluminum wire baskets inside a ca. 4 cu. ft. stainless steel chamber; exposing the contaminated discs to ca. 600 ppm H₂O₂, with or without 8 ppm NH₃, for desired periods at 23 to 24 °C; removing the discs from the chamber and extracting with 10 mL CH₃CN; and using ¹H and ³¹P NMR (Varian 300 Unityplus or Varian 400 Inova NMR spectrometers) to analyze the extracts for products and unreacted agent. VHP[®] was generated using a Steris VHP[®] M100 Biodecontamination System (Steris Corp.) employing the minimum 1 cu. ft./min flow rate and either a 0.4 or 0.5 g/min injection rate for the 35% H₂O₂ feed. These parameters provided a ca. 600 ppm H₂O₂ concentration as measured inside the chamber. NH₃ gas (Aldrich) was introduced at a rate of 0.18 mL/min into the 1 cu. ft./min VHP[®] stream just prior to the chamber using an Aalborg mass flow controller (Model GFC171S) resulting a calculated 8 ppm value for the NH₃ concentration.
14. Wagner, G. W.; Sorrick, D. C.; Procell, L. R.; Schwartz, L. I.; McVey, I. F., unpublished results.